



**KIRAVANS**<sup>TM</sup>



VAN CURTAINS  
FITTING GUIDE

[www.kiravans.co.uk](http://www.kiravans.co.uk)



**Tools required:**  
electric drill, 2.5mm drill bit,  
Philips screw driver



**Time to complete:**  
approx 30 mins  
per curtain



**DIY difficulty:**  
● ● ○ ○ ○



**1** If you plan to carpet line your van - do this before fixing the curtain rails.



**2** Each curtain rail is labelled for a specific window and says 'T' for top and 'B' for bottom. Position the rail centrally, where it fits best in the window recess.



**3** Using a 2.5mm metal drill bit - choose one of the pre-drilled rail holes and drill through the van metal work. A Stanley knife is useful to remove any lining carpet that gets caught round the drill bit.



**4** Screw the rail in place using one of the supplied screws. Repeat for all the pre-drilled holes in each rail.



**5** You should now have secured both the top and bottom rails.




**6** Thread both curtains on to the top rail using the sliders, which are pre-fixed to the curtains. Ensure that the side poppers are located at the outside edge of each curtain.



- 7** Don't worry that the curtains appear too short – they are designed to stretch.



- 8** Insert the plastic end stops into the top rail and, using the hole in each as a guide, drill right through the rail and the van metal work.

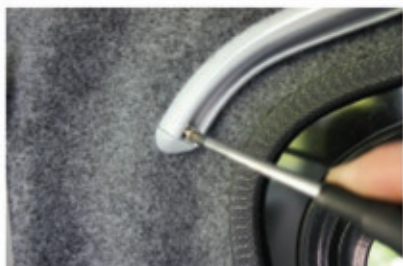

- 9** Secure the end stops using the screws supplied.



- 10** Stretch the curtains down to the bottom rail and thread the plastic sliders into the rail.




- 11** Drill and secure the two end stops into the bottom rail.



- 12** Using the side poppers on each curtain as a location guide, mark and drill the van metal work. Screw the 'male' popper to the van window recess.



- 13** Congratulations! You have successfully fitted your van curtains. The supplied tie-backs will keep your curtains neatly out of the way during the day and maximise light and vision inside the van.

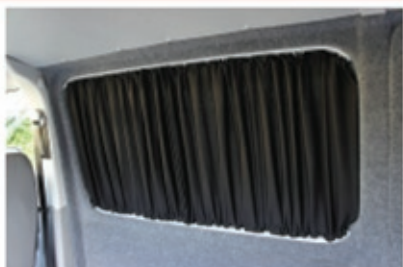

- 14** Secure the side poppers on each curtain for maximum night time privacy and darkness.

## Additional Information



When fitting the tailgate curtains, ensure that the top rail is fitted facing down so as not to drill through to the glass.



Example of a fitted rear barn door curtain.

## KIRAVANS NO QUIBBLES RETURNS POLICY

**We like to keep things simple and straight forward**

- If it's not what you want just send it back for a full refund.
- All returned items must be unused, undamaged, and in their original packing so that we can still sell them as new.
- If you ordered something and reckon it's not really what you're after we will happily accept it back for replacement or refund within 14 days.

To return an item just fill in the RETURNS FORM supplied or log on to <http://www.kiravans.co.uk> and click on the RETURNS link.